


**CITY OF WINTER PARK
WATER & WASTEWATER UTILITY DEPARTMENT
REFERENCE THE "WATER & WASTEWATER UTILITY STANDARDS, SPECIFICATIONS & DETAILS MANUAL"**

DATE: January 2, 2008

DOMESTIC WATER METER - 3" OR GREATER

SCALE: N.T.S.

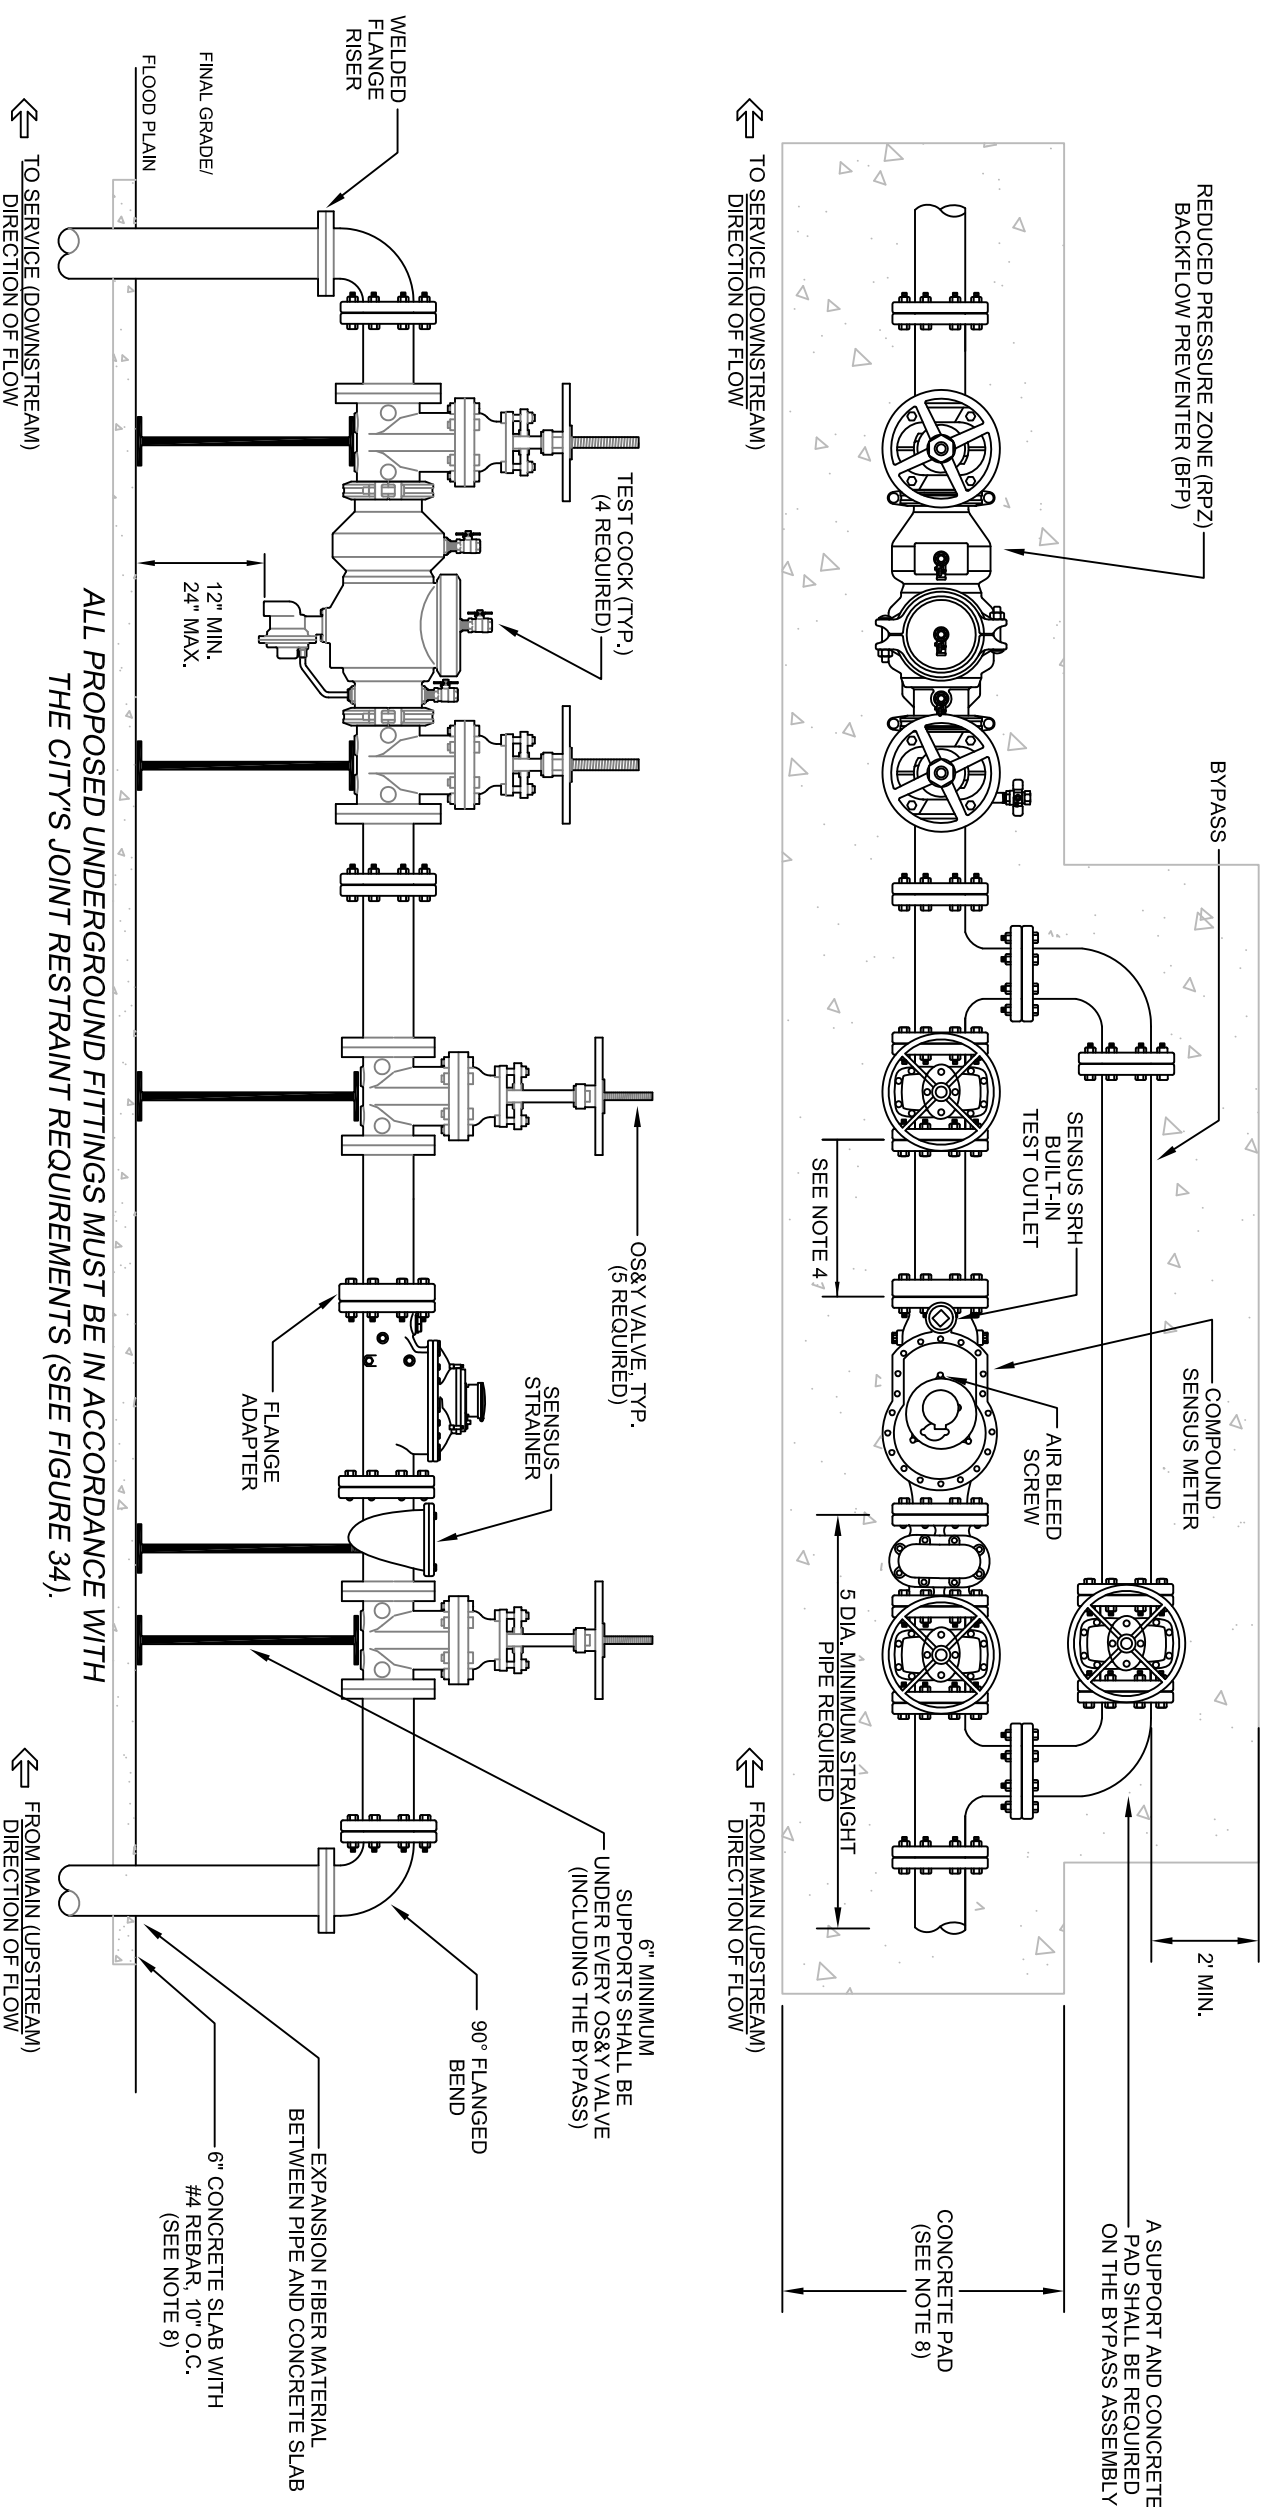

- NOTES:**
1. REMOVE CONSTRUCTION DEBRIS FROM LINE BEFORE INSTALLING METER. INSTALL METER IN HORIZONTAL PLANE. LARGE SLUGS OF ENTRAINED AIR CAN DAMAGE THE INTERNAL MEASURING MECHANISM. UTILIZE THE AIR BLEED SCREW TO SLOWLY VENT DURING INITIAL LINE FILL.
 2. WHEN INSTALLING SENSUS COMPOUND METERS, A MINIMUM OF FIVE PIPE DIAMETERS OF STRAIGHT RUN PIPE OR EQUIVALENT FULL OPEN COMPONENTS ARE REQUIRED UPSTREAM OF THE METER.
 3. FULL OPEN FLOW COMPONENTS MAY CONSIST OF A STRAINER, STRAIGHT PIPE, FULL OPEN GATE VALVES, BYPASS TEES AND CONCENTRIC REDUCERS (1 NORMAL REDUCTION ONLY). A STRAINER IS REQUIRED FOR PROTECTION AND FLOW CONDITIONING OF THE METER.
 4. DO NOT INSTALL ELBOWS, BENDS, NONCONCENTRIC REDUCERS, CHECK VALVES AND/OR PRESSURE REDUCING DEVICES WITHIN FIVE PIPE DIAMETERS UPSTREAM OR THREE PIPE DIAMETERS DOWNSTREAM OF THE METER.
 5. GATE VALVES LOCATED IMMEDIATELY UPSTREAM OF THE METER SETTING ARE ACCEPTABLE, PROVIDED THEY ARE FULLY OPEN DURING METER SERVICE AND ARE NOT USED TO THROTTLE FLOW RATES THROUGH THE METER.
 6. ACCURACY LEVELS MAY BE DETERMINED BY COMPARISON ACCURACY TESTING. USE A SENSUS PORTABLE LARGE METER TESTER OR REMOVE THE SUSPECT METER AND TEST IT ON A CALIBRATED TEST BENCH. ACCURACY LEVEL ADJUSTMENT MAY BE ACCOMPLISHED BY CHANGING CALIBRATION.
 7. INSTALLATION SHALL BE IN ACCORDANCE WITH THE CITY'S REQUIREMENTS.
 8. THE CONCRETE PAD SHALL EXTEND 2' (MINIMUM) FROM THE EDGE OF PIPE AND BYPASS PIPE.

FIGURE 40